

# SERVICE INSTRUCTIONS


Part No. 058440

www.keatingofchicago.com


**KEATING**  
OF CHICAGO, INC.®

1-800-KEATING

## INSTRUCTIONS FOR REPLACING SPARK IGNITION MODULE (Part # 033762) WITH 24V (Part # 058439)

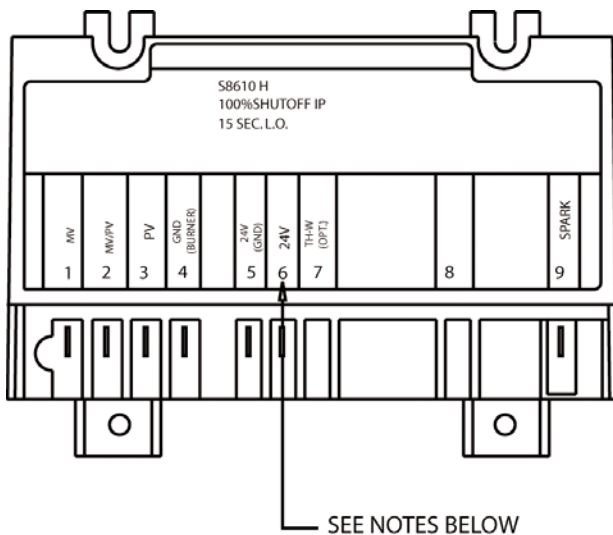

OLD MODULE 033762

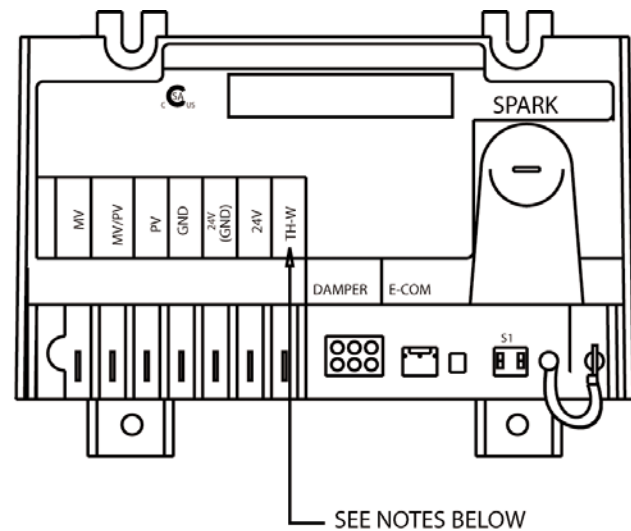

NEW MODULE 058439

Remove old spark module and mount new module in same location using existing hardware.

Place all wires in the same location on the new module except number 6 24V. Place this wire on TH-W on new module.

NOTE: If the spark terminal on the old module has a boot connection, place the adapter terminal supplied in the box on the cable and connect to the spark location on the new module.