


SERVICE INSTRUCTIONS

1-800-KEATING • keatingofchicago.com

BASKET-LIFT FIELD INSTALLATION INSTRUCTIONS

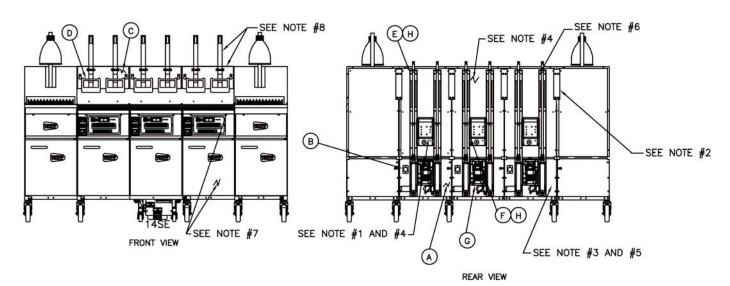

PART NO.

C0003573I

035063

053591

011435

055090

055653

054509

054386

054380

055601

K

J

1

Н

F

E

D

С

В

QTY

1

18

3

60

3

3

6

6

3

3

DESCRIPTION

CABINET BACK SPLIT TOP

COVER PANEL ELECT

ASSY PWR SUPPLY BL CPU

SINGLE BASKET LIFT ASSY

GUIDE ASSY. BASKET LIFT

COVER REAR SE GAS/ELEC

BASKET LIFT WELDMENT

WIRING DIAGRAM 14 TS CPU

SCREW #10 X 1/2 SELF DRILL

ASSEMBLY SEQUENCE:

- Disconnect electrical power from outside source. Remove electrical box cover and maintain hardware, discard cover. This cover will be replaced with item #F
- Remove connection strips in (4) locations, retain strips and hardware.
- Remove lower rear split cover and discard (do not discard hardware). This part will be replaced with item #A.
- 054955 3 CABINET BACK SPLIT BOTTOM Drill through rivets to remove electrical box from split top covers. Remove split top covers (retain hardware) these covers will be replaced with item #I. Install existing electrical power supply to item #I with item #J and install to fryer with retained hardware.
- Install items #A to fryers with retained hardware. NOTE: Item #G and item #B was installed to item #A at the factory, for convenience.
- Remove cover from item #E, position these assemblies as shown in rear view. Attach item #E to rear cover using item #H. Align to holes in top of split rear covers. Slide lower pin from basket-lift actuator to allow actuator to be rotated upward to allow for attachment of basket-lift housing on the bottom of item #A using item #H.
- Remove screws to lower front control panels and open fryer door to gain access for wiring corrections and connections according to diagram (item #K). Reassemble front control panel.
- Remove the basket hangers and replace with item #C. Install item #D on each shaft as shown in front view. 8.
- Reconnect electrical power from outside source fryer.
- 10. Test basket lift operation. Buttons 1 to 4 will control left basket-lift, 5 to 8 right basket-lift.






SERVICE INSTRUCTIONS

1-800-KEATING • keatingofchicago.com

BASKET-LIFT FIELD INSTALLATION INSTRUCTIONS

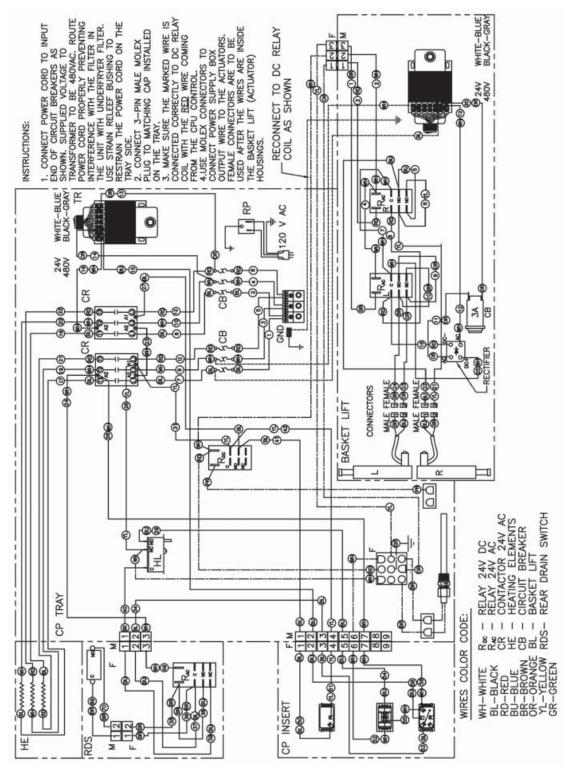



SERVICE INSTRUCTIONS

1-800-KEATING • keatingofchicago.com

BASKET-LIFT FIELD INSTALLATION INSTRUCTIONS

